



4.2.1 Locking clamp adjustment

LOCKING CLAMP ADJUSTMENT REQUIRES NO SPECIAL TOOLS OR SKILLS, PLEASE READ THE INSTRUCTIONS BELOW

Locate the locking clamp assembly, (see picture above). The locking assembly consists out of the locking rail (1) round adjustment nut (2), spring (3) and the locking lever (4). The round nut controls the tightness of the locking mechanism. To adjust the clamp, turn the scope up side down, presses down and hold the locking rail (1) with the thumb of your left hand. With your right hand adjust the nut (2) by turning it. Turn the nut clockwise to tighten the mount and counterclockwise to loosen it up.