


## GENERAL SETUP PROCEDURES FOR P1X20 SCOPE

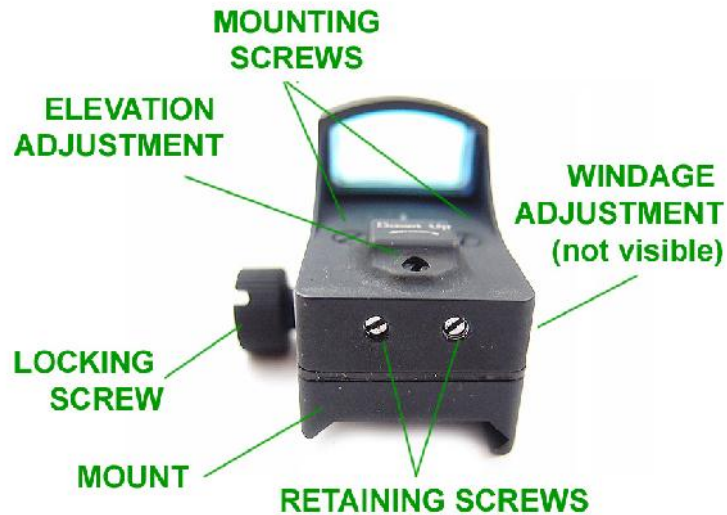

### BATTERY INSTALLATION

To get access to the battery compartment take off the protective cover. Using a regular flathead screwdriver take out mounting screws rotating them counterclockwise. Once the screws are out the Picatinny mount comes off and opens access to the battery compartment.

Insert a CR2032 battery observing polarity. When the battery is in place the mount can be screwed back on to the bottom of the scope.

### MOUNTING THE SCOPE

Slide the scope on to your upper rail. When the scope is located at a point that appears to be most comfortable for you to aim, tighten the grip using the locking screw to fix the scope in position.

### WINDAGE & ELEVATION ADJUSTMENT

Loosen retaining screws using a flathead screwdriver. This would give a possibility to use windage and elevation adjustment screws for zeroing your scope.

Zero at the range you intend to engage targets at. Use the adjustment screws to move the aiming mark. Follow regular zeroing procedures to make sure that the bullet actually goes where we put the aiming mark. When zeroing is accomplished, i.e. the point of aim and the point of impact overlap, the retaining screws should be tightened.